


Instruction PowerStop Type C (app. 80 x 80 cm):

For getting maximal benefit of the DOMINO PowerStop it must "hang loose" behind the target.

(Please use the supplied 2 hangers and 2 Shock Cord Rubber Band of 1meter length).



1. Position the "Outer leg" of the hanger in the upper eyelets (both right and left side):

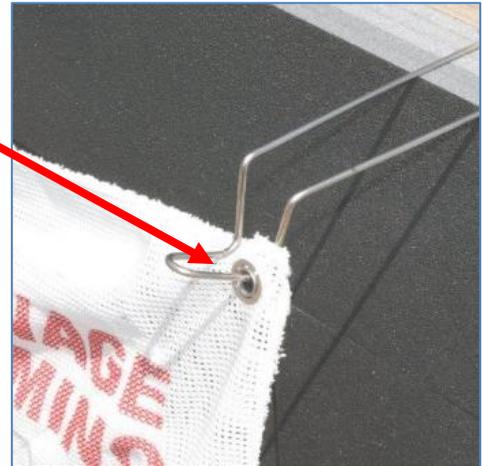

2. Press the "legs" of the hanger into the holes in the wooden frame top:




The PowerStop is now hanging loosely like on the large picture.

For ensuring (even in windy conditions) the PowerStop always stays in correct position:

3. tie the 2 shock cords into the both lower eyelets.

4. have the shock cord band surround the cross batten (loose).

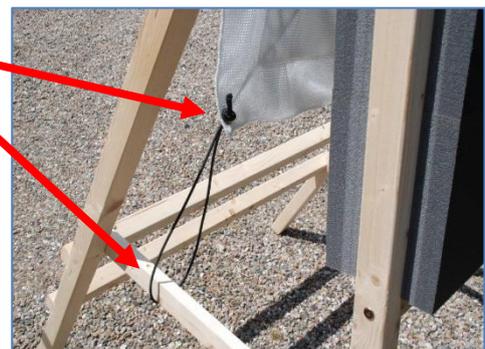

Thereby you ensure the PowerStop is in correct position in all cases).

- Tema Damage wish you all the best of archery joy using your new DOMINO PowerStop.