 
 


# DAMAGE DOMINO Target System\*

 
After  
4000  
arrows

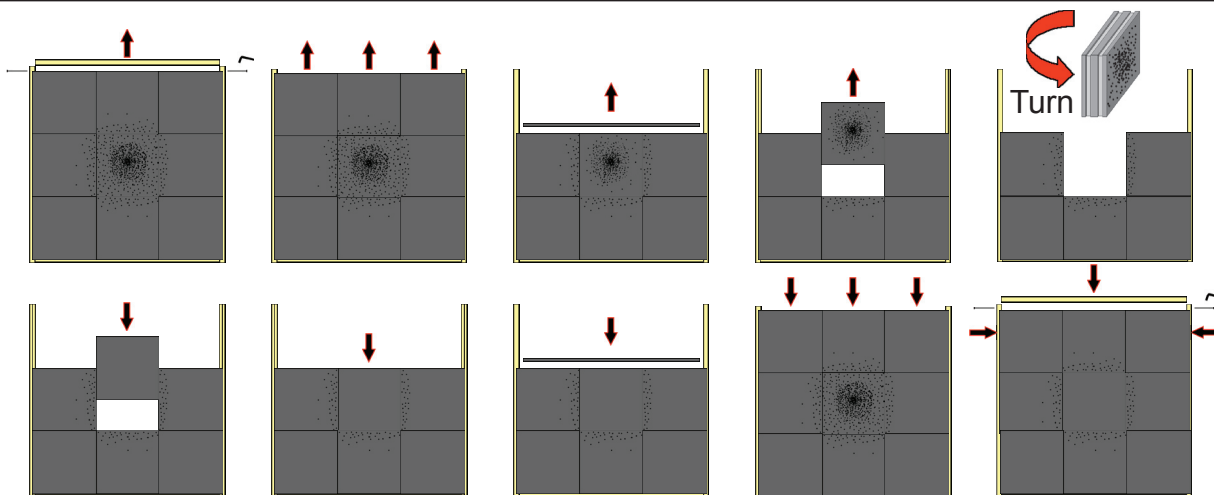


6000

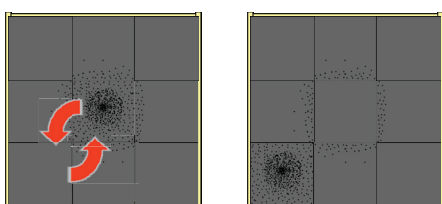


10000

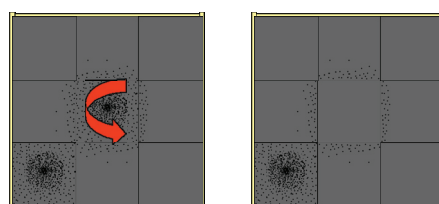


12000

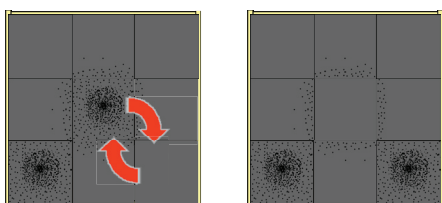 


16000

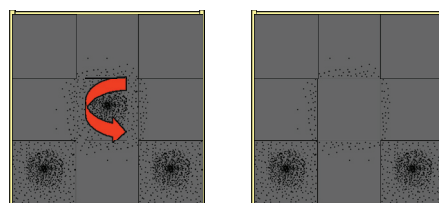 


18000

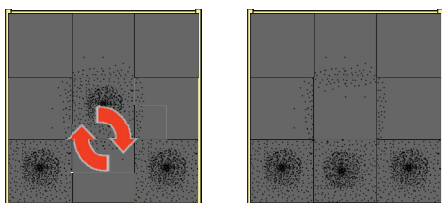 


22000

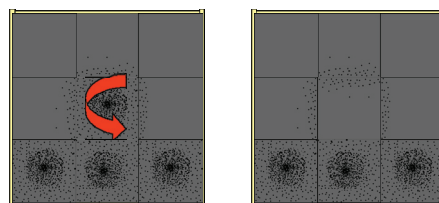 


24000

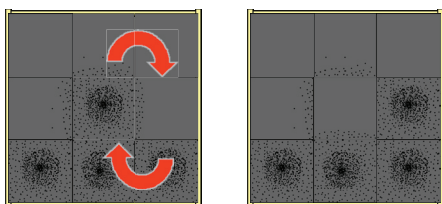 


28000

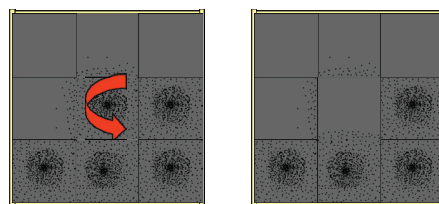 


30000

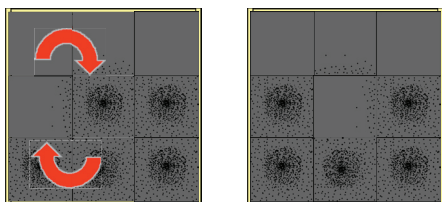 

34000

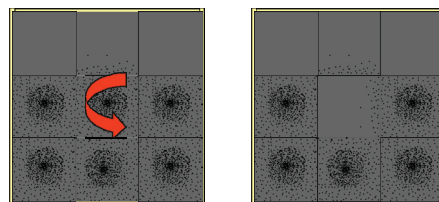 

36000

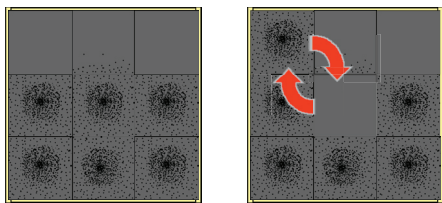 

A minimum of 54000 arrows  
can be shot before you have  
to replace any parts.  
(6000 shot pr. Centre)

54000  
shot